

FLOW RATE READING GUIDE for Kytola variable area flow meters

Read the flow rate on the scale at the highest widest point of the float.

